




If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)


LOCATION OF CONTROLS

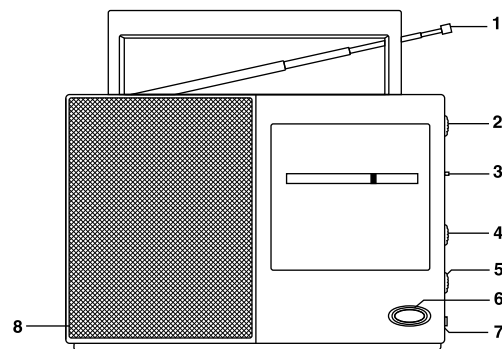

Lenco

3-BAND PORTABLE RADIO

MPR-031

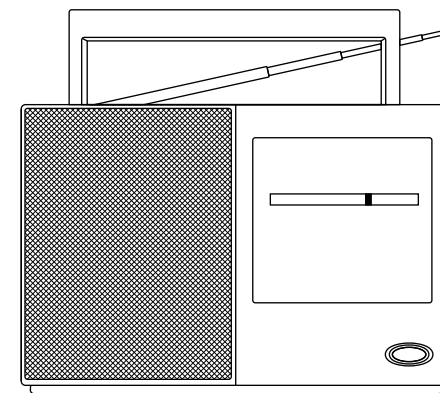

OPERATING INSTRUCTIONS



WARNINGS



ATTENTION

To reduce the risk of electric shock do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING

1. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids such as vases, shall be placed on apparatus.
2. Minimum 5~10 cm distances around the apparatus for sufficient ventilations
3. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc;
4. No naked flame sources such as lighted candles should be placed on the apparatus;
5. Attention should be drawn to the environmental aspects of battery disposal;
6. The use of apparatus in moderate climates.

E-1

LOCATION OF CONTROLS

1. Telescopic Antenna
2. Tuning Knob
3. Waveband Selector
4. Volume Control Knob
5. Tone Control Knob
6. Standby Switch
7. Headphone Socket
8. Battery door(at rear)

OPERATION

Batteries: Your radio is designed to operate on DC by using 4 pcs UM1, R20, (D size) dry cell batteries. Remove the Cover (8) and install 4 pcs fresh batteries according to the indication shown inside the compartment.

Note: Always remove the batteries from the radio when the radio is not going to be used for a long period. Leakage from batteries may cause damage to the radio.

AC Mains: Insert correctly wired mains plug into a AC Mains power outlet point.

OPERATIONS OF CONTROLS

Switch On the radio by pressing Standby Switch (6). Adjust the Volume Control (4) to the desired volume level. Select the required waveband by sliding the Waveband Selector (3). Tune your radio by turning the Tuning Knob (2).

NOTE:

- A. The standby switch in this unit is mounted on the secondary circuitry and does not disconnect the whole unit from the mains in position OFF.
- B. This unit must not be exposed to moisture and rain.

E-2

SPECIFICATIONS

Frequency range: FM 88 - 108 MHz
AM 530 - 1600 KHz
LW 150 - 260 KHz

Antenna: FM: Telescopic rod antenna
AM/LW: Built-in ferrite bar antenna

Speaker: 3.5 inch 8 Ohm dynamic speaker

Output power: 0.5 Watt R.M.S.

Phone jack: 3.5 mm

Dimension: 250 (L) x 75 (W) x 168 (H) mm

Power source: DC 6V 4 x D/R20/Mono size
AC 230V ~ 50 Hz

E-3